



EN Care instructions & instructions for use
WOODEN KITCHEN AIDS

- Before first use, clean thoroughly with hot water (at least 65 °C) and detergent, then rinse with a lot of water. The article is suitable for dishwashers, but the wood is heavily stressed and can become cracked - hand cleaning recommended.
- Always clean thoroughly after use and do not leave in water for a long time.
- Leave to dry upright after rinsing and do not store the kitchen aid until it is completely dried.
- Do not leave in hot cookware for longer than 15 minutes.