

EN Care instructions & instructions for use MULTI-GLASS CUTTING PLATES

- Clean thoroughly before first use. Suitable for dishwashers up to 50 °C.
- Always clean thoroughly after use.
- Do not use any abrasive cleaning materials (e.g. scouring cream) otherwise the surface could be scratched.
- The glass plate is heat-resistant up to approx. 200 °C.

Safety instructions:



- Do not place any hot pots, pans etc. on the plate that come immediately from the stove or oven! Never place the glass plate on a switched on ceramic hob! Do not place hot pots, pans, etc. on the glass cover plate as this may cause discolouration of the plate.
- Ensure that the glass plate is never exposed to any thermal shock effect. A sudden cold or heat difference can cause the glass to break!
- Be careful with damaged glass, please do not use the cutting plate any more. There is a risk of breakage and thus injury!