



EN Care instructions & instructions for use
SLATE PLATES

- Do not put in the dishwasher. Before first use, clean thoroughly with hot water (65 °C) and detergent, then rinse with plenty of water. Always clean thoroughly with hot water and detergent after use.
- Always make sure the washing-up tools are clean. Replace rinsing sponge or rinsing brush if necessary.
- The slate plate is not suitable as a cutting board. Knives can possibly become blunt.